





## Storage & Handling

- Store in a clean, dry place where the electrodes will be protected from damage.
- Storage surfaces shall be flat and leveled.
- Concrete is the preferred surface for storage and stacking electrodes.
- · Do not stack electrodes too high:
- $\cdot$  250 to 450mm (10-18") electrodes: Max. 6 pallets high.
- . 500-700mm (20-28") electrodes: Max. 4 pallets high.
- . 750mm (30") electrodes: Max. 3 pallets high.

Operators should always wear appropriate Personal Protective Equipment (PPE) to perform the activities described below.

## Handle electrodes with care when using fork lifts or cranes for transport.



- Forks should be spread to fill the space between stringers to prevent tipping.
- Damage to end-faces and threads can lead to performance problems and difficulty in jointing: Retain protective end caps and sombreros.
- Always be careful when cutting steel banding.
- Use proper cutting tools and safety equipment.

# 2 Handling & Jointing

### Preparing New Electrode to be Added

- Maintain protective end cap until lift plug is to be inserted.
- Check that socket and end faces are clean and undamaged.
- Check that lift plug is clean and undamaged.
- · Carefully insert lift plug into socket.
- · Only use certified, load tested lifters.



## **Preparing to Add**

When raising an electrode into the vertical position with a crane, the sombrero should be kept in place and some form of cushioning material should be used to prevent damage to the **PreCet**<sup>TM</sup> pin.





Clean both the socket of the old column and the body, pin and end face of the new electrode with an aiding

If dirt in the threads remains it should be removed with a soft brush that will not damage the thread.

Old socket





# **3** Handling & Jointing

#### Adding the New Electrode

- $\boldsymbol{\cdot}$  Center the new electrode over the column and lower carefully.
- Use a spacer to prevent thread damage when lowering the new electrode.
- Ease the weight of the new electrode from the spacer and remove the spacer.
- The threads can then be engaged using the threaded stem attached, without further crane movement.
- The use of a torquing ring will aid the rotation during thread engagement.
- It is most important to tighten the joints correctly under controlled conditions.



# 4

## **Handling & Jointing**

### **Applying the Torque**

There are three basic methods:

- 1. Manual: Torque Wrench.
- 2. Mechanical: Hydraulic Pneumatic.
- 3. Robot.


For electrodes over 500mm (20") in diameter, a mechanical or robotic method is preferred for consistent safe jointing.

Recommended Tightening Torques				
Electrode	Diameter	Torque		
mm	inches	Nm	kg.m	lb.ft
250	10	390	40	300
300	12	590	60	450
350	14	830	85	600
400	16	1075	110	800
450	18	1375	140	1000
500	20	1770	180	1300
550	22	2460	250	1800
600	24	3440	350	2500
650	26	4520	460	3300
700	28	6000	610	4400
750	30	8000	815	5900

Note: Variations from these values may be applicable in certain cases. Please discuss with your Technical Service Engineer.

## After the Add

The white bands indicate the position of the socket base.

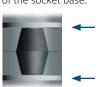


Slip electrode to correct operating position and avoid clamping inside the white bands.



Do not clamp on open sockets or those with lift plugs left in.



No joints should be left above the clamp.

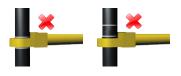






# Electrode Recovery

Depending on type of breakage, some suggested best possible recoveries are shown below. Sockets to be removed are easily split off with a hammer and chisel

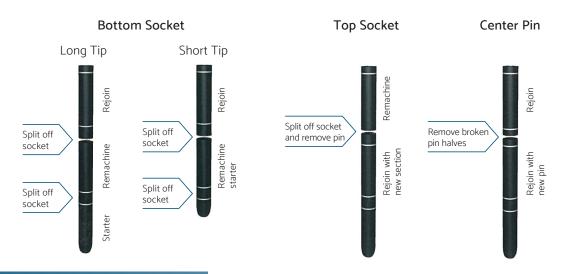

# **Electrode Handling Tools**

Always remember that safety is totally dependent on maintaining lifting equipment in good condition and on using it correctly.



#### **Graphite Lift Plug**

Graphite Lift Plugs are compatible with the electrodes, having similar hardness and thermal expansion properties. Thus they cause less socket damage than metal plugs which may be burred. They can be left as top socket protection without risk of socket wall splitting due to unequal thermal expansion.



#### **Torquing Ring**

This device can be used to aid rotation of the electrode during manual jointing or can be attached by cable to either a pneumatic/hydraulic piston or mechanical torquing device. A mechanical method for applying the torque is preferred for electrodes over 500mm (20") diameter.



#### **Spacer**

Effective in preventing socket to nipple thread contact while lowering the new electrode. The spacer can be made of metal or wood.



#### **Threaded Stem Hook**

Used to allow final lowering of new electrode without further crane movement.



### **Torque Wrench**

Used for manual application of torque either off or on furnace depending on practice.



# **Safety Considerations**

- It is recommended that you follow safety instructions, use appropriate tools and follow the handling instructions.
- A lack of careful handling during the movements on and off furnace and during jointing of an electrode column can lead to safety hazards.
- The low friction property of graphite leads to difficulties in handling that require the correct tools for safety.
- Due to the shape and weight of connecting pins, improper handling can result in dangerous conditions.
- Graphite is a dense material. Consider the weight of graphite products when handling or transporting.
- Electrodes are often transported with cranes. You should stay away from suspended loads.
- Adding graphite into a molten bath may cause unexpected foaming of the bath to the point that the vessel may not contain the molten substance (carbon boil).
- Be careful when handling used or broken electrodes. Even "Black" electrodes can still be in excess of 300 °C.
- For additional information regarding our electrodes and pins, please refer to our Safety Data Sheets (SDS #4155 and 4156).

## **Contact Us**

#### AFRICA

Alberton, South Africa Service Subsidiary

GrafTech South Africa (PTY) Ltd 38 Rae Frankel Street Brackenhurst, Alberton, 1448 SOUTH AFRICA Tel: +27-11-867-4228

#### **ASIA**

Hong Kong, China Service Subsidiary

GrafTech Hong Kong Ltd 13/F, Gloucester Tower, The Landmark, 15 Queen's Road Central, Central, Hong Kong CHINA Tel: +86-139-1106-0499

Chiba-shi, Japan Sales & Service Subsidiary

GrafTech Japan G.K. CD/3F Makuhari Techno Garden, 1-3 Nakase, Mihama-ku, Chiba-shi, Chiba, 261-8501 JAPAN Tel: +81-43-296-8178

#### **EUROPE**

Bussigny, Switzerland
Global Sales & Production Planning Office

GrafTech Switzerland S.A. Boulevard de l'Arc-en-Ciel 36 1030 Bussigny SWITZERLAND Tel: +41-21-821-3111

Calais, France Graphite Electrode Manufacturing Facility, Sales & Service Subsidiary

GrafTech France S.N.C. Rue des Garennes F62100 Calais, FRANCE Tel: +33-3-21-19-1420 Milano, Italy
Sales & Service Subsidiary

GrafTech S.p.A. 77 Via Monte Napoleone, 8 20121 Milano MI, ITALY Tel: +41-79-838-08-61

Pamplona, Spain Graphite Electrode Manufacturing Facility, Sales & Service Subsidiary

GrafTech Iberica S.L. Carretera de Astrain S/N E-31171 Ororbia Navarra, SPAIN Tel: +34-948-321-200

Ratingen, Germany
Sales & Service Subsidiary

GrafTech Germany GmbH Kaiserswerther Str. 115 40880 Ratingen, GERMANY Tel: +49-151-724-470-17

Sheffield, United Kingdom Sales & Service Subsidiary

GrafTech UK Limited Hart Shaw Building, Europa Link Sheffield, South Yorkshire S9 1XU ENGLAND Tel: +44-114-251-8850

#### MIDDLE EAST

**Dubai, United Arab Emirates Sales & Service Subsidiary** GrafTech International FZE

Office 1124 JAFZA ONE Tower A, 11th Floor Jebel Ali Free Zone, Dubai, UAE Tel: +971-48-170-570

#### **NORTH AMERICA**

Brooklyn Heights, Ohio Corporate Headquarters

GrafTech International Holdings Inc. 982 Keynote Circle Brooklyn Heights, Ohio USA 44131 Tel: +1-216-676-2000

Monterrey, Mexico Graphite Electrode Manufacturing Facility, Sales & Service Subsidiary

GrafTech México S.A. de C.V. Carretera Miguel Alemán Km. 20 #600 Ote. Apodaca, Nuevo León MEXICO 66600 Tel: +52-81-8-135-5600

St. Marys, Pennsylvania<sup>(1)</sup> Graphite Electrode Manufacturing Facility, Sales & Service Subsidiary

GrafTech USA LLC 800 Theresia St. St Marys, Pennsylvania USA 15857 Tel: +1-814-834-2801

Port Lavaca, Texas Petroleum Needle Coke Manufacturing Facility

Seadrift Coke L.P. 8618 State Hwy. 185 North P.O. Box 192 Port Lavaca, Texas USA 77979 Tel: +1-361-552-8887

### SOUTH AMERICA

Salvador, Brazil

Machine Shop, Sales & Service Subsidiary GrafTech Brasil Participações Ltda Rodovia BA-522 / Km-7 Candeias, Bahia BRAZIL 43813-300 Tel: +55-71-2108-9462

(1) While maintaining the capability to produce graphite electrodes and pins, production activities at St. Marys were indefinitely suspended in 2024, with the exception of graphite electrode and pin machining.

The information in this publication is provided "AS IS" without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability, fitness for a particular purpose, or non-infringement, and GrafTech International Ltd. and its subsidiaries ("GrafTech International" or "GrafTech") assume no liability arising out of the use of it. The data listed falls within the normal range of product properties but should not be used to establish specification limits or used alone as the basis of design. GrafTech's liability is expressly limited to its terms and conditions of sale. Changes are periodically added to the information contained herein. GrafTech may make improvements and/or changes in the product(s) and/or services described in this publication at any time. No portion of this material may be reprinted in any form without the express written permission of GrafTech International. UCAR® is a registered trademark licensed for use to GrafTech International Holdings Inc. ©2024 GrafTech International Holdings Inc.